



WAX HEATER

WAX-350

Model: **WAX-350**

Certificate No.: **PTC24112705101E-EM01**

TECHNICAL DATA:

Power: **100W**

Rated input:

AC 110-240V 50/60Hz 1A

Capacity: **500 ml**

Temperature range: **55-140°C**

IMPORTANT SAFETY INFORMATION:

When using electrical appliances, especially in the presence of children, always follow basic safety precautions.

1. Do not place or store the appliance where it may fall into a bathtub or sink.
2. Do not immerse the appliance in water or any other liquids. Keep the appliance and surrounding area dry at all times.
3. If the appliance falls into water, immediately disconnect it from the power supply. Do not place your hands in the water.
4. As with all electrical appliances, electrical components may remain live even after the appliance has been switched off. Exercise extreme caution at all times.

WARNINGS:

To reduce the risk of burns, electric shock, fire, or personal injury:

1. Do not operate the appliance if:
 - the power cord or plug is damaged,
 - the appliance is malfunctioning,
 - the appliance has been dropped or damaged,
 - the appliance has fallen into water.
2. Exercise extreme caution when using the appliance near children.
3. Keep the power cord away from hot surfaces.
4. Do not immerse the appliance in water or any other liquids.
5. Do not allow the power cord to hang over the edge of a countertop or table where it may be accidentally pulled or tripped over.
6. Use the appliance only on a stable and level surface.
7. After use, disconnect the appliance from the power supply and allow it to cool completely before cleaning or storing.
8. Do not wrap the power cord around the appliance during operation.
9. Do not use accessories not recommended by the manufacturer.
10. Always check the wax temperature before use.
11. Use the appliance only for its intended purpose as described in this instruction manual.

OPERATING INSTRUCTIONS:

WARNING

Always check the temperature of the wax before placing your hands into the wax heater.


1. Place the protective collar ring onto the rim of the appliance.
2. Remove the plastic lid from the wax heater.
3. Attach the handle to the wax container to facilitate safe removal.
4. Turn the temperature control knob and set it to "100" until the wax reaches a liquid consistency.
5. The heating process takes approximately 15 minutes. To accelerate heating, place the lid on the appliance.
6. Once the wax has completely melted, set the control knob to the middle position. The appliance will

- maintain a constant operating temperature throughout the day.
- Before starting the treatment, test the wax temperature by applying a small amount to the inside of the wrist. Adjust the temperature using the control knob if necessary.
 - After use, remove the wax container using the handle while the appliance is still warm.
 - After completing operation, switch off the appliance by turning the control knob fully counterclockwise.
 - Place the transparent lid on the appliance to protect the wax from contamination.
 - Clean the appliance only after switching it off and while it is still slightly warm. Use a wax remover intended for cleaning wax residues.
 - Before the next use, repeat steps 1–7.

CAUTION:

Hot wax may cause burns.

- For professional use only.
- Read the instruction manual carefully before use.
- Do not leave the appliance unattended while switched on.

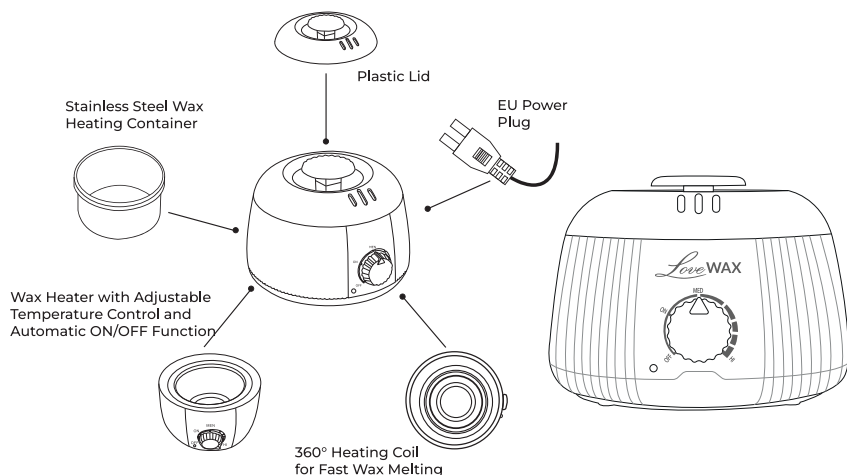

In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

- It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
- Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
- Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
- Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.

IMPORTER:
GNNLAB sp. z o.o.
 ul. Piotrkowska 270
 90-361 Łódź, Polska
 hurt.gnn-lab.com
 uwagi@gnb-lab.com
 Made in PRC