



SM-500A WAX HEATER

Model: **SM-500A**

Certificate No.: **CTB200117009EX-ZS,**

CTB200302011WX-ZS

TECHNICAL DATA:

Power: **100W**

Rated input: **220V/50Hz-110V/60Hz**

Rated output: **1A**

Capacity: **500 ml**



SAFETY INSTRUCTIONS:

WARNING

When using electrical appliances, especially in the presence of children, basic safety precautions must always be followed.

Before operating the device, carefully read the entire instruction manual.

1. Do not place or store the appliance in a location where it may fall or be pulled into a bathtub, sink, or other container filled with water.
2. Do not immerse the appliance in water or any other liquid. Keep the device and surrounding area dry at all times.
3. If the appliance falls into water, immediately disconnect it from the power supply. Do NOT place hands in the water.
4. As with all electrical appliances, electrical components remain energized even after the device has been switched off; therefore, caution must be exercised.

WARNINGS:

To reduce the risk of burns, electric shock, fire, or injury:

1. Do not operate the appliance if:
 - the power cord or plug is damaged,
 - the appliance is not functioning properly,
 - the appliance has been dropped or damaged,
 - the appliance has come into contact with water.
2. Exercise special caution when using the appliance near children.
3. Keep the power cord away from hot surfaces.
4. Do not immerse the appliance in water or any other liquid.
5. Do not allow the power cord to hang over the edge of a table or countertop where it may be accidentally pulled or snagged.
6. Operate the appliance only on a stable and level surface.
7. After use, disconnect the appliance from the power supply and allow it to cool before cleaning or storing.
8. Do not wrap the power cord around the appliance during operation.
9. The use of accessories not recommended by the manufacturer may create a hazard.
10. Before immersing hands in paraffin or wax, always check the temperature of the product.
11. Use the appliance only for its intended purpose as described in this instruction manual.

OPERATING INSTRUCTIONS:

1. Place the protective collar onto the rim of the appliance.
2. Remove the lid.
3. Insert the wax container into the heater.
4. Set the temperature control to the MAX setting (120°C will appear on the display) until the wax reaches a liquid consistency. The heating process takes approximately 30 minutes, depending on ambient temperature.
5. Once the wax has melted, adjust the temperature to the desired working temperature. The current temperature is displayed on the screen.
6. Before use, test the wax temperature by applying a small amount to the inner side of the wrist.
7. After use, remove the wax container using the handle while the appliance is still warm.
8. Turn the appliance off after use by rotating the control knob fully to the left. Clean the heater after it has cooled down to prevent wax residue buildup.
9. To clean the appliance, use a wax cleaner while the unit is switched off and slightly warm.
10. For subsequent use, repeat steps 1–8.

IMPORTANT:

Very hot wax or paraffin may cause burns.

This product is intended for professional use only.

For best results, thoroughly read and understand the instruction manual before operating the appliance.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.

IMPORTER:
GNBLAB sp. z o.o.
ul. Piotrkowska 270
90-361 Łódź, Polska
hurt.gnb-lab.com
uwagi@gnb-lab.com
Made in PRC