

UV NAIL LAMP NTN PREMIUM CS-JZD001

Model: CS-JZD001

Certificate No.: AH2024041601, AH2024041602, MTL24041800305R01

NTN PREMIUM

TECHICAL DATA:

Power: 3W

Nominal input: AC100-240V 50/60Hz

Nominal output: 5V

Number of diodes: 1 pc - imitation luminous bulb

Wavelength: 395nm

1. USEFUL TIPS:

1. Store the lamp in a cool, dry place and avoid direct sunlight.
2. If stains appear on the surface, clean gently with a soft cloth or cleaning pad. Do not wash directly with water.
3. After each use, disconnect the power and store the lamp in its box to prevent dust from entering.
4. Power adapters, portable chargers, and USB ports should provide a stable 5V DC power supply.
5. Slight heating during use is normal.
6. If the USB cable is damaged, discontinue use immediately to avoid potential risks.

2. TIPS TO REDUCE ALLERGIC REACTIONS:

1. Perform a skin allergy test before first use.
2. Due to individual differences, some users may experience allergic reactions.
3. If discomfort occurs, stop using the product immediately.

3. THE SET INCLUDES:


- CS-JZD001 lamp
- USB-C cable
- User manual
- Warranty card

4. CHARACTERISTICS OF THE DEVICE:

1. Lamp holder
2. Flexible gooseneck
3. Switch
4. USB plug
5. Clip

5. DEVICE DESCRIPTION:

The lamp is the perfect combination of functionality, safety, and comfort - designed to make everyday nail styling easier and to shorten working time.

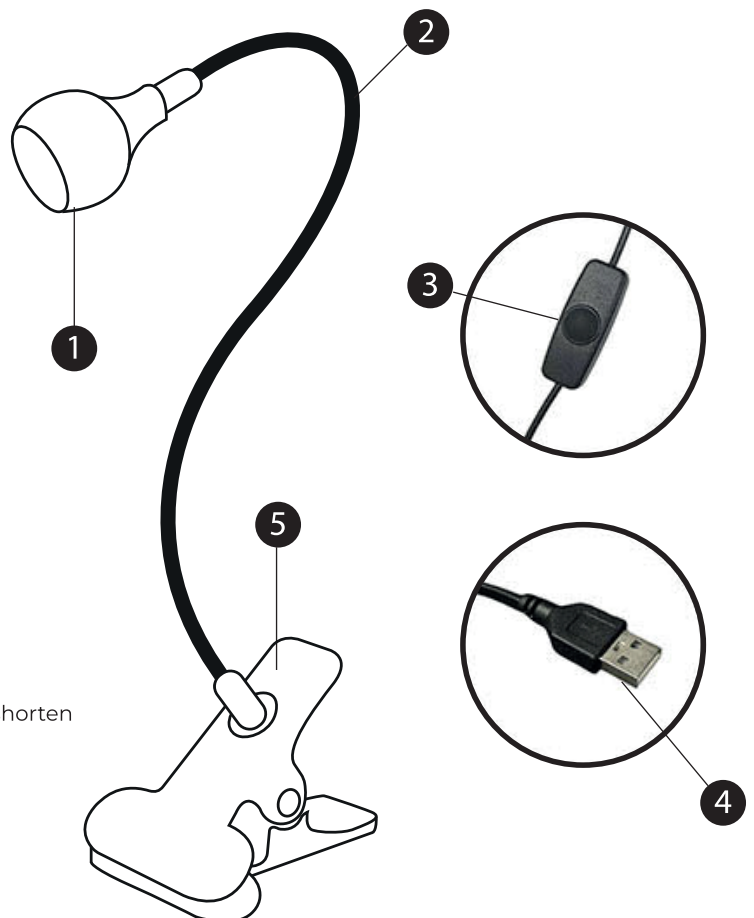

6. PRODUCT FEATURES:

1. The gooseneck nail lamp is compact, lightweight, and portable. With a USB port, it can be easily connected to a computer, power bank, or any USB power source.
2. It has a flexible gooseneck and a sturdy clip design, making it more flexible and adjustable according to position needs, and can be directly clipped onto your desk or wherever you feel most convenient. Solve the problem of nail lighting. Adjust the usage angle freely.
3. The rotatable nail lamp design can cure all types of nail polish, especially suitable for curing nail polish gel. Both long nails and short nails can be cured evenly without dead corners.
4. One click control switch, not glaring. It will not cause the skin to darken. Safe for nails and skin, eye friendly.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.

IMPORTER
GNBLAB sp. z o.o.
ul. Piotrkowska 270
90-361 Łódź, Polska
www.gnb-lab.com
uwagi@gnb-lab.com

Produced for:
Allepaznokcie Michał Szewczyk
ul. Piotrkowska 270, Łódź
www.allepaznokcie.pl

Made in PRC