

MOLLY NAILS UV/LED NAIL LAMP V9BAT CORDLESS

Model: V9BAT

Certificate No.: 20240422001, 20240422101, 20240422201

*Molly
Nails*

TECHICAL DATA:

Power: Max 36W

LED Power Irradiance: Equivalent to 60W CCFL lamp

Nominal input: 100-240V 50/60 Hz

Nominal output: 12.6V1.9A

Number of UV LEDs: 36 pcs

Battery capacity: 11.1V2600mAh 28.86Wh

Wavelength: 365+405nm

1. SAFETY OF USE:


1. Please read this instruction carefully before using.
2. Please charge the machine fully before using it for the first time.
3. This machine is powered by rechargeable lithium battery. If it is not used for a long time, the battery needs to be charged once every 3 months to prevent excessive power depletion to shorten the battery life, resulting in battery bulge. The battery cannot be charged and other problems.
4. If the battery cannot be charged (after charging for a certain period of time, the machine will be out of power immediately and cannot be used). It indicates that the battery is damaged. Do not charge or use the battery to avoid safety problems.
5. When not using the nail lamp, please turn off the power switch of the machine in time to avoid prolonged battery standby, power loss and shorten the battery life.
6. Do not use the lamp if the power supply or timer buttons are damaged.
7. The single long lighting time should not exceed 600 seconds to avoid reducing the service life of the product.
8. Please note that making self-switches and changes to your device is prohibited and equivalent to the loss of warranty.
9. Do not stare directly at the UV light, which can cause eye damage. The lamp uses UV/LED diodes that emit dangerous UV rays. They can also cause skin damage. The skin may be more sensitive to UV rays when taking medication or using cosmetics. If you notice sudden changes on your skin, seek medical advice immediately.
10. Keep out of reach of children.

2. THE SET INCLUDES:

- Lampa V9BAT
- AC Adapter
- User manual
- Warranty card

3. CHARACTERISTICS OF THE DEVICE:

1. Infrared sensor
2. Digital display
3. 10 s button / Tryb Hand care
4. 30 s button
5. 60 s button
6. 90 s button / Tryb low Heat
7. Power socket
8. ON/OFF button

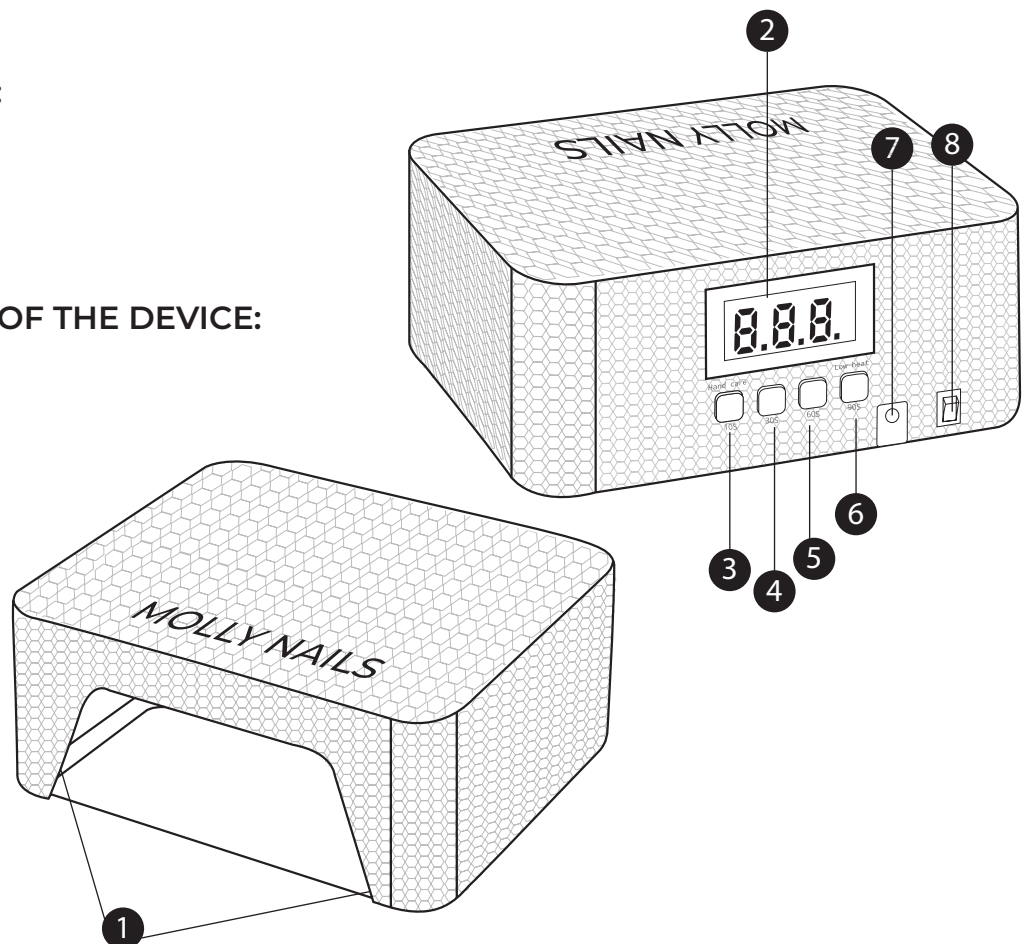

4. DEVICE DESCRIPTION:

The V9BAT lamp was designed for manicurists. It enables the rapid curing of UV/LED gels.

5. OPERATING INSTRUCTIONS:

1. After connecting the adapter, switch on the power. By default, the LED display is set to 60 seconds. When the hand is placed inside, the UV light turns on and the timer counts down from 60 to 0. If the hand is removed during curing, the lamp will continue to operate until the timer ends.
2. Press the 10s, 30s, or 90s buttons to set the timer. The display will show the selected time and the lamp will turn on immediately. When the countdown finishes, the display resets to the selected timer setting. Removing the hand does not turn the lamp off.
3. **Hand Care Mode** - press and hold the 10s button for 1.2 seconds. The hand care indicator will light up. In this mode, 6 LEDs on the top are off while the remaining 30 LEDs are on, reducing heat sensation on the back of the hand. The display will show **EXX**.
4. **Low Heat Mode** - press and hold the 90s button for 1.2 seconds. The low heat indicator will light up. The display will show **LXX** and power output will be reduced to 60%, making it ideal for curing heat-sensitive gels.
5. The UV light works with a prompt sound. At the beginning, „Bi” beeps briefly once, and at the end „BiBi” beeps twice.
6. **Battery level display** - the battery icon decreases step by step as power is consumed. When the icon flashes, the battery is low. Please connect the adapter to recharge if continued use is needed.
7. **Charging and working time** - the built-in lithium battery takes about 2.5 hours to fully charge. When fully charged, it can generally provide more than 3 hours of work (based on a cycle of 30s ON / 30s OFF), depending on the type of gel and curing time.
8. To extend battery life, it is recommended not to use the lamp while charging.
9. Always use the original 12.6V 1.9A adapter supplied with the lamp. If the adapter voltage exceeds 16V, a buzzer will sound and the display will show "OU", preventing use with an incorrect adapter.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.



In accordance with Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators and repealing Directive 91/157/EEC, this product is marked with the symbol of a crossed-out wheeled bin. The symbol indicates that the batteries or accumulators used in this product should not be disposed of with normal household waste. Users of batteries and accumulators must use the available collection network for these items that enables their return, recycling and disposal.

IMPORTER
Molly Lac
Michał Szewczyk
ul. Piotrkowska 270
90-361 Łódź, Polska
uwagi@mollylac.com
www.mollylac.com

Made in PRC