

## MOLLYLAC 858-8 CASSETTE DUST ABSORBER - USER MANUAL




### Technical data:

Power (via AC adapter):  
rated input: AC 100-240V 50 / 60Hz  
rated output: DC 12V 3A  
Maximum power: 80W  
Maximum revolutions: 4500rpm  
Dimensions: 24cm x 23cm x 7.5cm  
Name: Nail dust collector  
Model: 858-8  
Certificate No.: BSTXD200814033201EC,  
BSTXD200814033201SC

### Description of elements:

1. Cartridge air filter
2. Switch
3. Windmill

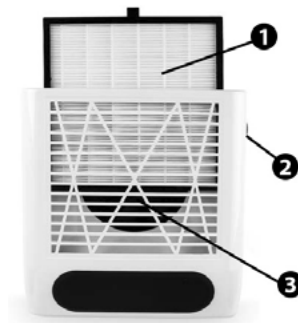

### Functions:

- An indispensable and indispensable tool in creating nail styling and in podiatry.
- Strong motor with high suction, ensuring that all dust and fragments of nails and skin are extracted.
- Easy to use - just place your hands or feet near the fan opening and the dust will be absorbed.
- The delicate and smooth surface will provide the client with a luxurious experience during the treatment.
- Perfect for absorbing dust, nail fragments and skin - both from hands and feet.

### User manual:

1. Connect the device to the network. Set the switch to the „I” position. The fan can reach a maximum of 4,500 revolutions per minute.
2. After starting the fan operation, you can put your hands or feet close to the absorber opening.
3. After finishing using the device, set the switch to „0” position.

### Precautions and maintenance of the device.

- Change the cassette filter regularly and in time.
  - Do not touch the fan during operation.
  - Connect the device to a network compatible with the device specification.
  - Do not disconnect the device from the mains when the device is turned on and working. Before that, set the switch to the „0” position.
  - Store and use in dry rooms. Keep away from water, moisture.
- Otherwise, the device may stop working and / or be damaged.
- After using the device, disconnect it from the mains.
  - If the power cord is damaged, it must be replaced with a new one of the same type at the service center.
  - It is forbidden to make unauthorized switching and changes to the device.
  - Opening the camera is strictly prohibited and will void the warranty, and the manufacturer does not take responsibility for the correct and safe operation of the device
  - Keep away from children.

### IMPORTER

GNBLab

Michał Szewczyk, Piotr Malinowski s.c.  
Piotrkowska 270  
90-361 Łódź, Polska  
gnb-lab.com

Made in P.R.C.