

LED NAIL LAMP MOLLY NAILS I2 CORDLESS

Model: I2

Certificate No.: 20230403001, 20230403101, 20230403201

*Molly
Nails*

TECHICAL DATA:

Power: 5W

Nominal input: 5V 2A

Number of LEDs: 1 pc

Battery capacity: 3.7V 500mAh 1.85Wh

Wavelength: 395~405nm

1. SAFETY OF USE:

1. Please read the instruction carefully before using the lamp.
2. Use the correct voltage and current.
3. Please do not place it in water or near fire source or use it at high temperature. Do not let water or other types of liquid into the machine to avoid machine failure.
4. When the touch switch fails, do not continue to use it.
5. This machine is powered by rechargeable lithium battery, please use qualified 5V 2.0A charger to charge. If you do not use the machine for a long time, to avoid damage caused by excessive battery consumption, please charge the battery once every three months to prevent excessive battery depletion and shorten the battery life.
6. When the machine is not charged, that is, after 10 minutes of charging, no power in less than 3 minutes, it indicates that the internal battery of the machine is faulty. Please stop using it immediately to avoid safety accidents caused by bad batteries.
7. Long lighting time should not exceed 600 seconds, so as not to reduce the life of the product.
8. This light source does not harm the human body, but it is still doubtful that it will harm the eyesight when looking directly at the light source.
9. Because the dark color nail tips will block more than 90% of the UV light, so that the UV light cannot pass through the nail tips to nail gel polish, resulting in the gel cannot be dried, so the dark nail tips (such as black, dark gray tips) is not suitable for UV lamp to cure the gel polish.
10. This machine is suitable for the LED gel with wavelength of 395~405nm. Not suitable for UV gel. For some nail gel that is difficult to dry, such as black nail gel, it is necessary to extend the drying time appropriately. It is more appropriate to take 120S (twice). Please follow the nail gel company's instructions in detail.

2. THE SET INCLUDES:


- I2 lamp
- Bracket
- USB-C cable
- User manual
- Warranty card

3. CHARACTERISTICS OF THE DEVICE:

1. Ring touch switch
2. ON/OFF switch
3. LED display
4. USB-C socket
5. Torch
6. Bracket

4. DEVICE DESCRIPTION:

This I2 product is a LED nail lamp with lithium battery, small and fashionable. With a split design, the handheld light can be used alone or in combination with the stand. Especially suitable for hybrid nail curing, fast curing gels.

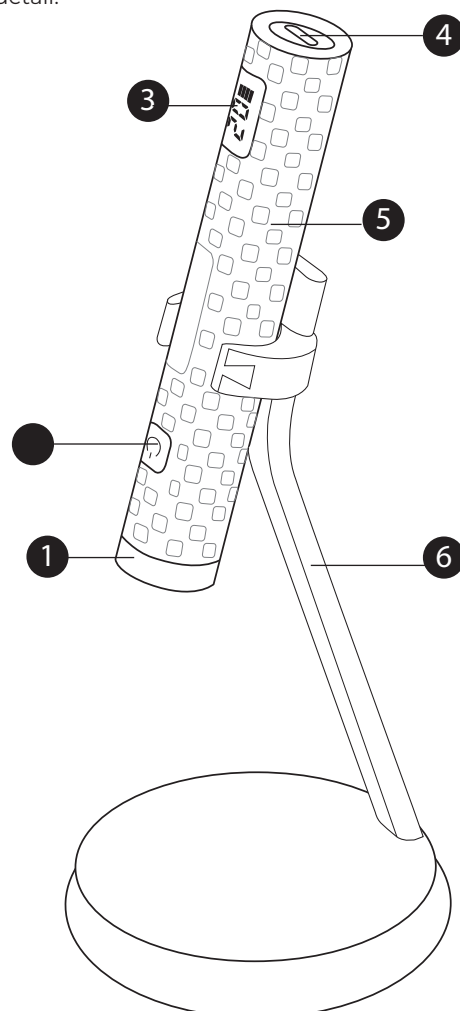

5. OPERATING INSTRUCTIONS:

1. Press and hold the ON/OFF button for 3 seconds to enter standby mode. Press the switch button or touch the circular touch switch to turn on the LED light and start working. The default working time for startup is 20 seconds. If the ON/OFF key is pressed again or the circular touch switch is touched during the operation of the LED light, the LED light will turn off.
2. Switching time mode: Press and hold the ON/OFF key for 1.5 seconds, and the 20s time mode will switch to the 60s time mode.
3. Charging display function: Connect a qualified 5V 2.0A charger, the machine enters charging mode. The normal fully charged time is 2 hours. The fully charged working time is 5 hours (calculated based on 60 seconds on and 60 seconds off).
4. Low battery warning: When the battery level drops below 10%, the bottom cell of the battery symbol starts flashing. Please charge in time before continuing to use.
5. If the machine is not used for 30 minutes continuously, it will automatically shut down. If you need to continue to use, please press for 3 seconds or reconnect the 5V power supply to start the machine and enter the working mode.
6. The torch can be used alone or combined on a bracket.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.



In accordance with Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators and repealing Directive 91/157/EEC, this product is marked with the symbol of a crossed-out wheeled bin. The symbol indicates that the batteries or accumulators used in this product should not be disposed of with normal household waste. Users of batteries and accumulators must use the available collection network for these items that enables their return, recycling and disposal.

IMPORTER
Molly Lac
Michał Szewczyk
ul. Piotrkowska 270
90-361 Łódź, Polska
uwagi@mollylac.com
www.mollylac.com

Made in PRC