

LED NAIL LAMP MOLLY NAILS U2 CORDLESS

Model: U2

Certificate No.: 20230403001, 20230403101, 20230403201



TECHICAL DATA:

Power: 3W

Nominal input: 5V 2.0A

Number of LEDs: 1 pc

Battery capacity: 14650 3.7V 1200mAh 4.44Wh

Wavelength: 395~405nm

1. SAFETY OF USE:

1. Please read the instruction carefully before using the lamp.
2. Use the correct voltage and current.
3. If the lamp does not work, check if the blue indicator light is on. If not, the device may be in hibernation or the battery may be depleted. Long-press for 3 seconds to restart, or recharge the lamp.
4. Do not place the device in water, near fire, or expose it to high temperatures. Avoid contact with liquids to prevent damage.
5. If the touch switch malfunctions, stop using the device immediately.
6. Use only a certified 5V1A/5V2A charger. To prevent battery damage, recharge at least once every three months if the lamp is not in use for an extended time.
7. If, after 10 minutes of charging, there is no power within 3 minutes, the internal battery may be faulty. Stop using the lamp immediately to avoid safety risks.
8. Do not use the lamp continuously for more than 600 seconds (10 minutes), as this may shorten its lifespan.
9. While the light source is safe for the human body, avoid looking directly at the light to protect your eyesight.
10. This lamp is suitable for gels with a wavelength range of 395~405nm, including extension gels and LED gels. It is not suitable for UV gels. For darker gels (e.g., black nail gel), extend curing time to around 120s (twice the standard). Always follow the nail gel manufacturer's instructions.

2. THE SET INCLUDES:


- U2 lamp
- USB-C cable
- Lamp base
- User manual
- Warranty card

3. CHARACTERISTICS OF THE DEVICE:

1. Torch touch switch
2. Ring touch switch
3. USB-C socket
4. Charging Indicator
5. Lamp base

4. DEVICE DESCRIPTION:

The U2 is a portable LED nail lamp with a built-in lithium battery, compact and stylish in design. Thanks to its detachable structure, the handheld lamp can be used on its own or mounted on the base. It is especially suitable for curing hybrid nail polishes and for quick curing nail gels.

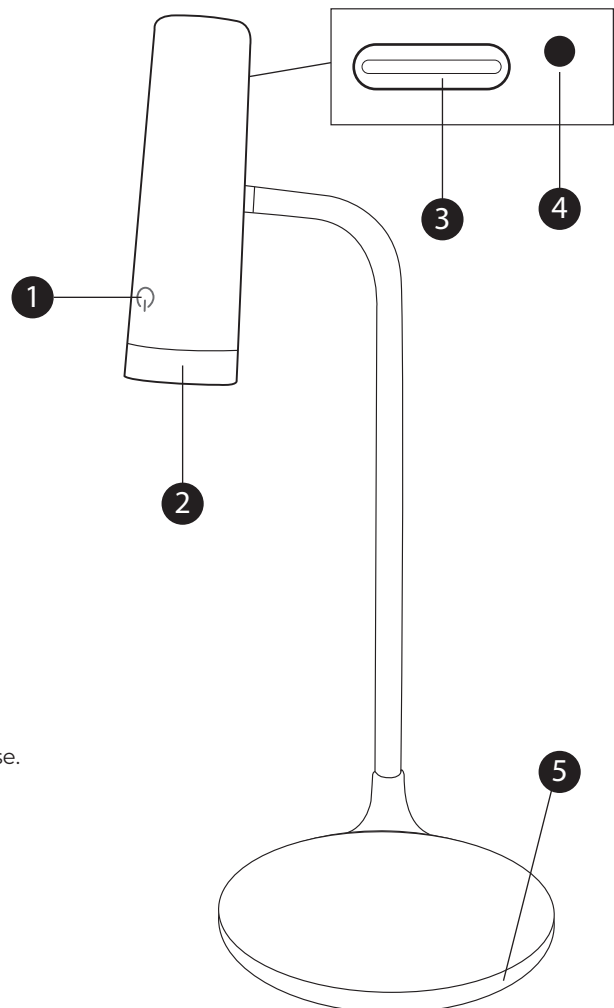

5. OPERATING INSTRUCTIONS:

1. Press the Torch touch switch, the LED will turn on, 60 seconds later, the LED will turn off. During 60 seconds of LED light on, if touch the button, the LED turned off.
2. Press the Ring touch switch, the LED will turn on, 60 seconds later, the LED will turn off. During 60 seconds of LED light on, if touch the button, the LED turned off.
3. **Low battery warning:** When the battery level drops below 10%, the charging indicator will turn red. Please recharge promptly to ensure proper use.
4. **Charging display:** Connect the lamp to a standard 5V1A or 5V2A charger. During charging, the indicator will show a "breathing light" effect (gradually brightening and dimming). Once fully charged, the indicator changes to a steady blue light.
 - Normal charging time: 2.5 hours
 - Fully charged working time: approx. 6 hours (calculated as 60s on, 60s off cycles)
5. If the LED lamp is not used for 30 consecutive minutes, the LED lamp and the blue indicator light will blink for 3 times and then enter the hibernation state. The blue indicator light will turn off and the machine will enter the shutdown state.
6. Long press the nail lamp for 3 seconds to turn it off and 3 seconds to turn it on.
7. Torch can be used alone or mounted on the base for combination.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.



In accordance with Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators and repealing Directive 91/157/EEC, this product is marked with the symbol of a crossed-out wheeled bin. The symbol indicates that the batteries or accumulators used in this product should not be disposed of with normal household waste. Users of batteries and accumulators must use the available collection network for these items that enables their return, recycling and disposal.

IMPORTER
Molly Lac
Michał Szewczyk
ul. Piotrkowska 270
90-361 Łódź, Polska
uwagi@mollylac.com
www.mollylac.com

Made in PRC